

MEBEL HOME

Outdoor & Indoor Furniture



Teak Care Instructions

Classic Teak is sourced from the outer sections of the tree, which naturally contain less oil. As a result, outdoor furniture made from Classic Teak requires regular oil treatment—at least 3 to 4 times per year. Failure to maintain this treatment schedule may lead to wood decay, and any warranty will be void if the teak has not been properly oiled as needed.

If you prefer your outdoor furniture to develop a natural silver-grey patina over time, we recommend choosing Core Teak instead.

Please note that teak is a natural, living material that can shift slightly and may develop small cracks in joints and surfaces. Exposure to rain will gradually roughen the surface. To restore smoothness, lightly sand with medium-fine sandpaper.

During the winter months, teak furniture should be stored in a cool, well-ventilated space to prevent the wood from drying out and cracking. Screws should be tightened before first use each season and regularly as part of ongoing maintenance.